

FOR ALL ADULTS SHOES (Soft shoes, Pointe, Jazz, Tap, Ballroom, Character) :
 POUR TOUTES LES CHAUSSURES (Demi-pointes, Pointes, Jazz, Claquettes, Danse de salon, Caractère) :
 except Pro#1 and sneakers / à l'exception des Pro No.1 et des sneakers

Sansha	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
USA Women Sizes	12.5	1	2	3	4	5	6	7	8	9	10	10-11	11-12	12-13	13-14	14-15	15-16	16
UK	12.5	13.5	1 (adult)	2	2.5	3.5	4	5	5.5	6.5	7.5	8	9	9.5	10.5	11	12	13
European	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48

These charts should only be used for general information.
 Many components such as age, weight, body structure need to be taken into account beside sizes.