


## Panel Glides Installation Information

### Parts Included

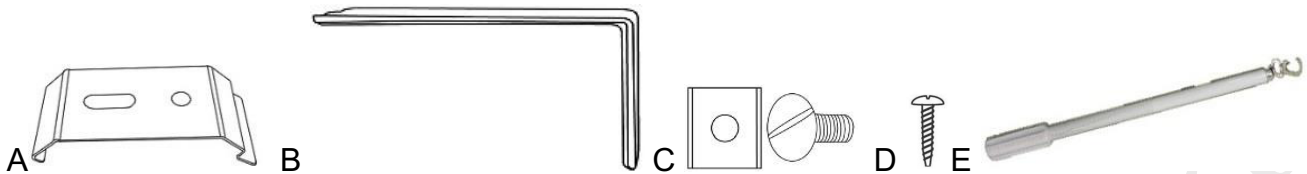

- A. Track Bracket
- B. Outside Mount L bracket
- C. Nuts & Bolts
- D. Installation Screws
- E. Pull Wand

### Important Notes

- Please check that all parts have been supplied before you begin to assemble your new Panel Glide
- The finished blind drop is the drop requested less 5mm for clearance
- The finished blind width is the finished track size
- Ensure that the blind is mounted level for correct operation
- If your track is wider than 2400mm, it will come in two pieces. To join the two pieces, please refer to the 'Joiner Installation Instructions' over page

### Positioning Blind


As per your order, determine the correct fitting location of mounting brackets and mark where you are going to install the brackets.

- Inside the window frame (Inside Mount or Recess Fit)
- On the window frame or wall (Outside Mount or Face Fit)

### Installing Mounting Brackets


#### Inside Mount

The installation brackets (part A) are fixed directly to the mounting surface, in the desired location, with edge 1 and 2 (see diagram) to the back of the Panel Glide. Make sure all brackets are in a straight line so the track will attach easily. (Wood screws have been provided however, screws suitable for gyprock or brick walls may need to be purchased.)

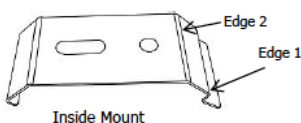


## Outside Mount

- i) Attach the installation bracket (part A) to the underside of the long end of the outside mount L bracket (part B), with the nut and bolt (part C) supplied. Please ensure the nut is on top of the L bracket and that edges 1 & 2 of the installation bracket are facing the back of the Panel Glide
- ii) Attach the outside mount L brackets (part B) to the wall or architrave in the desired locations; spaced evenly, ensuring they are all level.
- iii) If your track is wider than 2400mm, it will come in two pieces. A mounting bracket (part A) should be installed directly over the join to add extra strength.

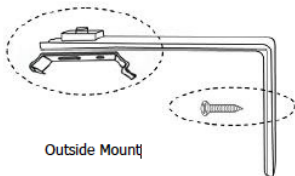

## Attaching Blind To Brackets

Position the track into the front edge of the installation bracket (part A) and gently push upwards to edge 1 only. Ensure the track is in the correct position, and then push upwards until the track clicks into edge 2. Attach the panels to the Velcro on the glides ensuring they are parallel to each other.

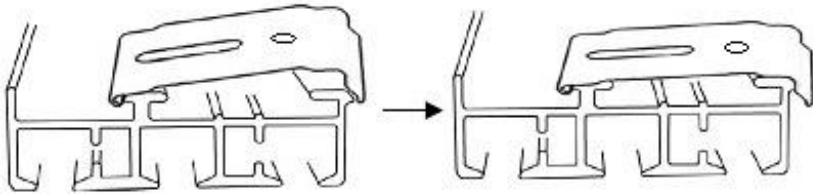

## Operating the Blind

To operate the blind successfully, attach the wand (part E) to the lead panel (choose the front or back locating hole to suit), and draw smoothly across the track.